


Quick Installation Guide

Quattro 24V 48V 5000VA 230Vac

 
www.victronenergy.com

Included

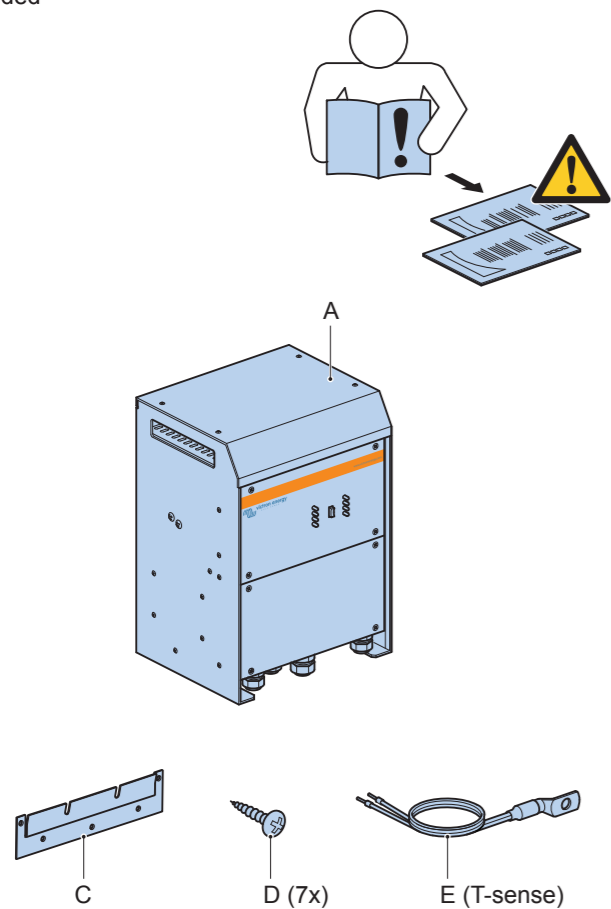

For fuse values:
refer to the user manual

Fuse (not included)



Not included

